
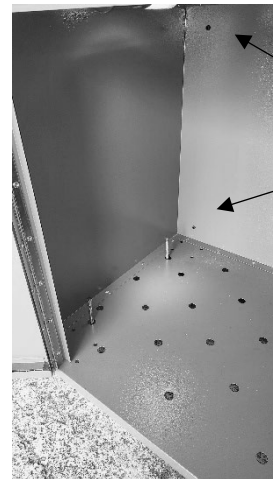


## Oil Cabinet - Installation Instructions

**Important** – R9 (R18) & R24 are only to be secured to a wall..

### Wall Mounting

1. Unwrap cabinet. 4 Keys are in a strong plastic bag in the top middle of the door.
2. Remove the 4 rubber bungs in the back of the cabinet.
3. Locate the cabinet against a wall with the lock on the right-hand side as shown.
4. Level the cabinet using off cuts of wood etc.
5. With the door open, using a 10mm masonry drill bit. Drill at least 60mm deep, through the 4 holes in the back of the cabinet into the wall.
6. Push the 4 sleeve anchor bolts supplied through the back of the cabinet and into the wall. Tighten the nuts until the anchor grips, then tap home with a hammer and tighten further with a 13mm spanner/socket.
7. Clear out any dust & check the door closes smoothly. If not, the wall you have bolted to is out of true. See where the cabinet is being pulled out of square and loosen a nut on a nearest sleeve anchor and pack out between the cabinet and the wall. Retighten the bolt and check the door closes with an equal gap.

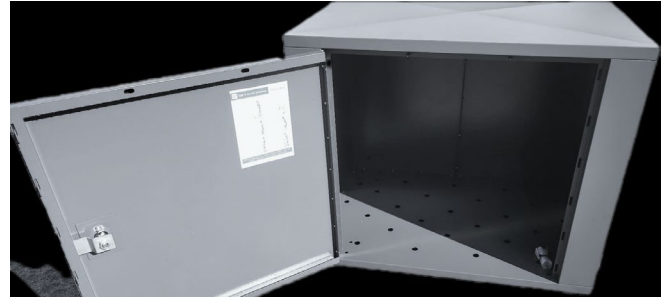

Wall fixing points, repeated on other side, 4 in total.

**Bunded cabinets must ONLY be secured to the wall**

**WARNING** – MAKE SURE YOU DO NOT DRILL WHERE THERE MIGHT BE ELECTRIC, GAS OR WATER PIPES.

Ri MANUFACTURING ACCEPT NO RESPONSIBILITY FOR ANY DAMAGE CAUSED TO PERSONS OR PROPERTY DURING INSTALLATION OF THE CABINET.

**For advice on how to install your cabinet call our technical support number on 01985 248454 or email [admin@rimanufacturing.com](mailto:admin@rimanufacturing.com)**